


HOW TO CONNECT MAIN SPEAKER

DX-213 is capable of driving two main speakers, which are left and right. We recommend you using center speakers for vocal monitor. Under this arrangement, main speaker can produce greater bass music output while center speaker can produce clear vocal or monitor. The mixing of music and vocal is important to produce quality sound for singing. Therefore, the audience can feel different three-channel speaker effects from main speaker and center speaker. You can also adjust the vocal in front panel, or you can adjust the vocal in either main out speaker by adjusting the balance.

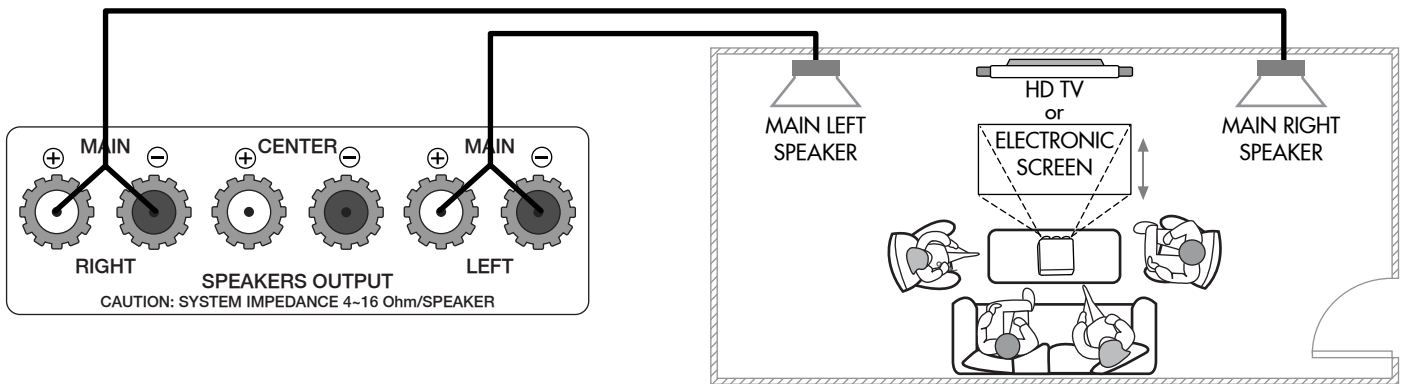

HOW TO CONNECT CENTER SPEAKER (MONITOR)

The center speaker is designed for monitoring the singer's voice. You can hook up one or two center speakers. In case of two speakers, please make sure that the speakers have a impedance of at least 8 ohms and are connected in parallel. Otherwise, this may damage your amplifier by overloading it.

Diagram 1 (One Center Speaker)


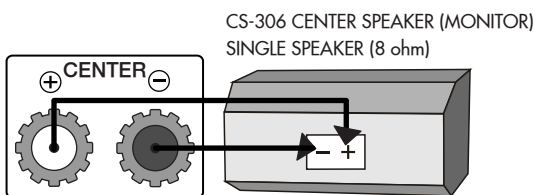



Diagram 2 (Two Center Speakers)

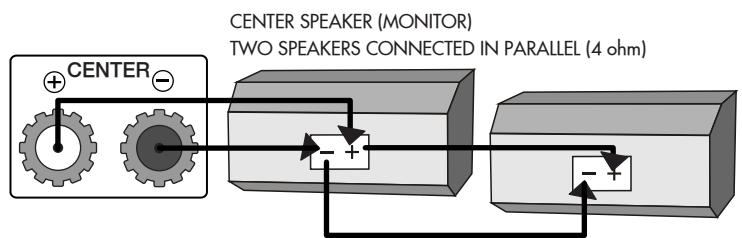

NOTE Please do not use speaker with impedance less than 8 ohms otherwise the amplifier may be damaged.


HOW TO CONNECT VIDEO MONITOR

Video Out: 1Vp-p/75 ohms

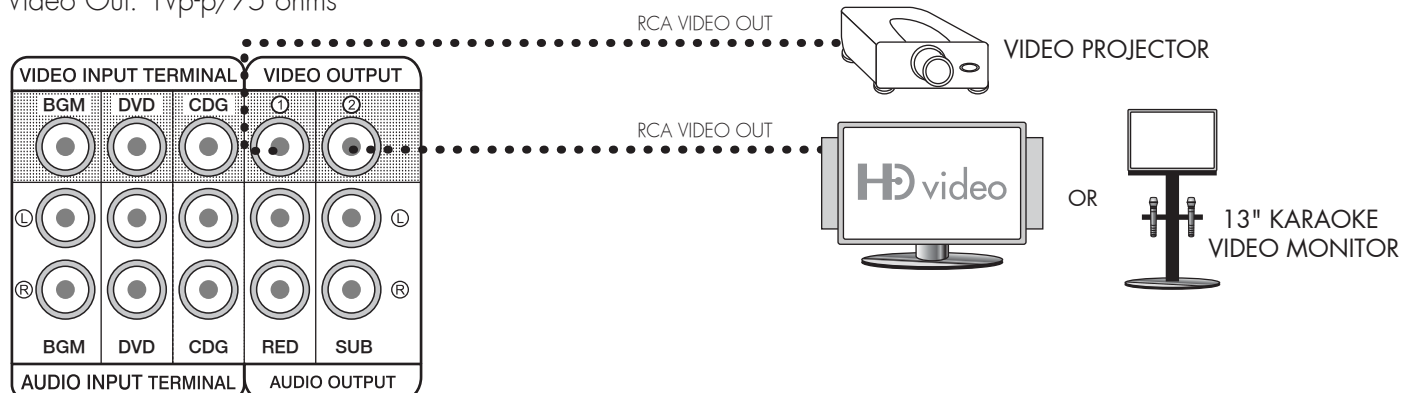

HOW TO CONNECT MUSIC A.V. SOURCE

Before you connect the source (i.e. BGM, DVD, CDG Karaoke), you should turn off the power for all machine, so it would protect you from electric shock and prevent the equipment from damage. To connect the AV source, the first thing to do is to connect the audio source to the amplifier input. Then, you can connect the video source. Please refer to the following diagram. To ensure high quality sound and video, we recommend using high quality cables. To learn more about high quality cable.

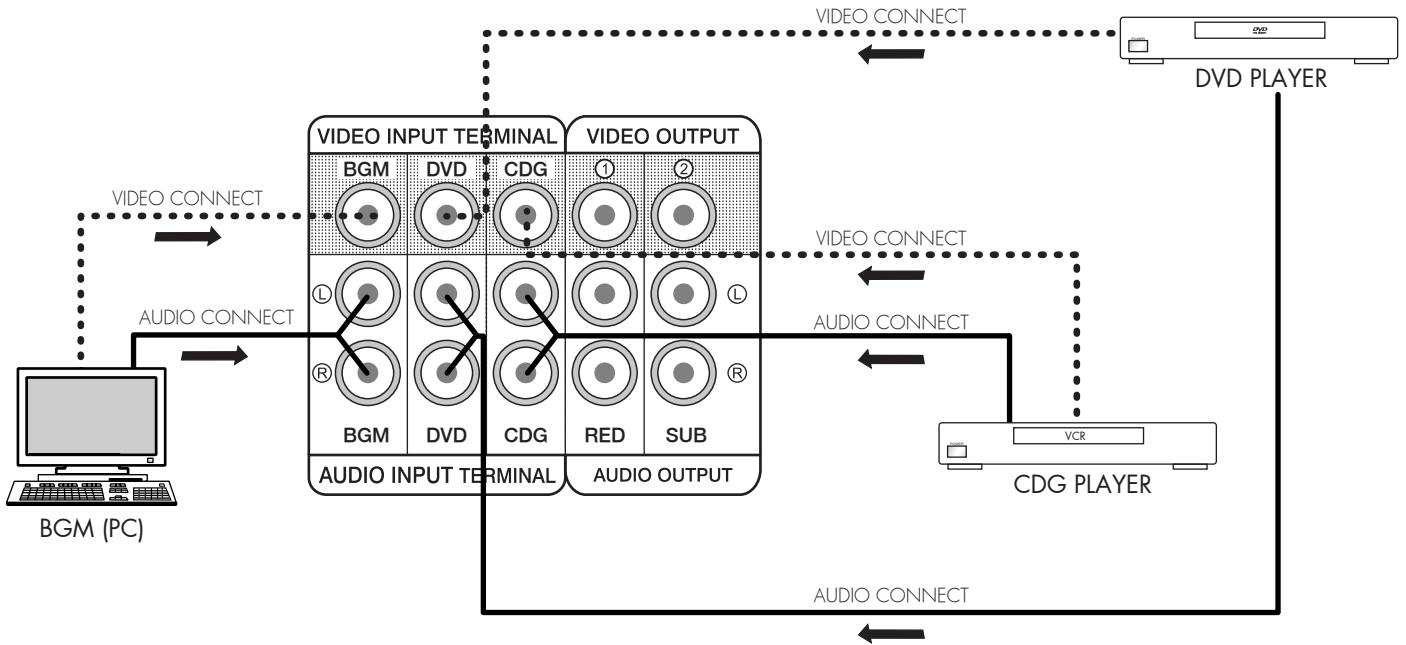

HOW TO CONNECT SUB WOOFER

