



## HOW TO CONNECT SPEAKER

DX-388 G2 is capable of driving four main speakers, which are grouped in Group A and Group B. We recommend you using different size of speakers for Group A (10-inch woofer or bigger) and Group B (6-inch woofer). Under this arrangement, Group A speaker can produce greater bass music output while Group B speaker can produce clear vocal. The mixing of music and vocal is important to produce quality sound for singing. Therefore, the audience can feel different effects from Group A and Group B speakers. You can also adjust the vocal on both speakers, or you can adjust the vocal in either speaker by adjusting the balance.

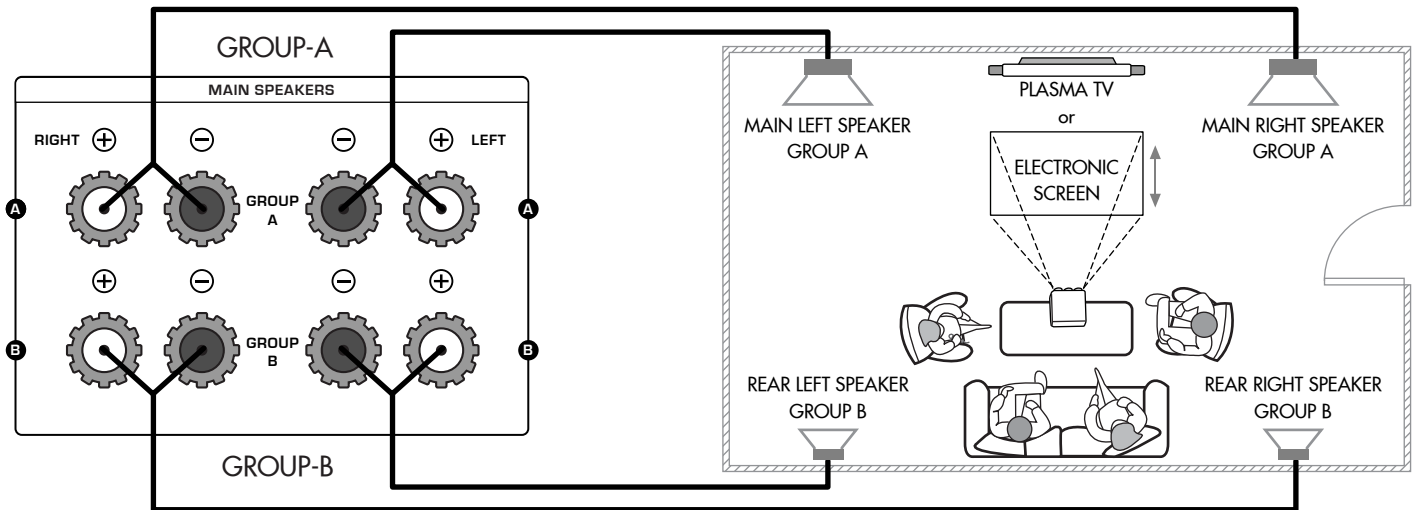

## HOW TO CONNECT VIDEO MONITOR


Video Out: 1Vp-p/75 ohms

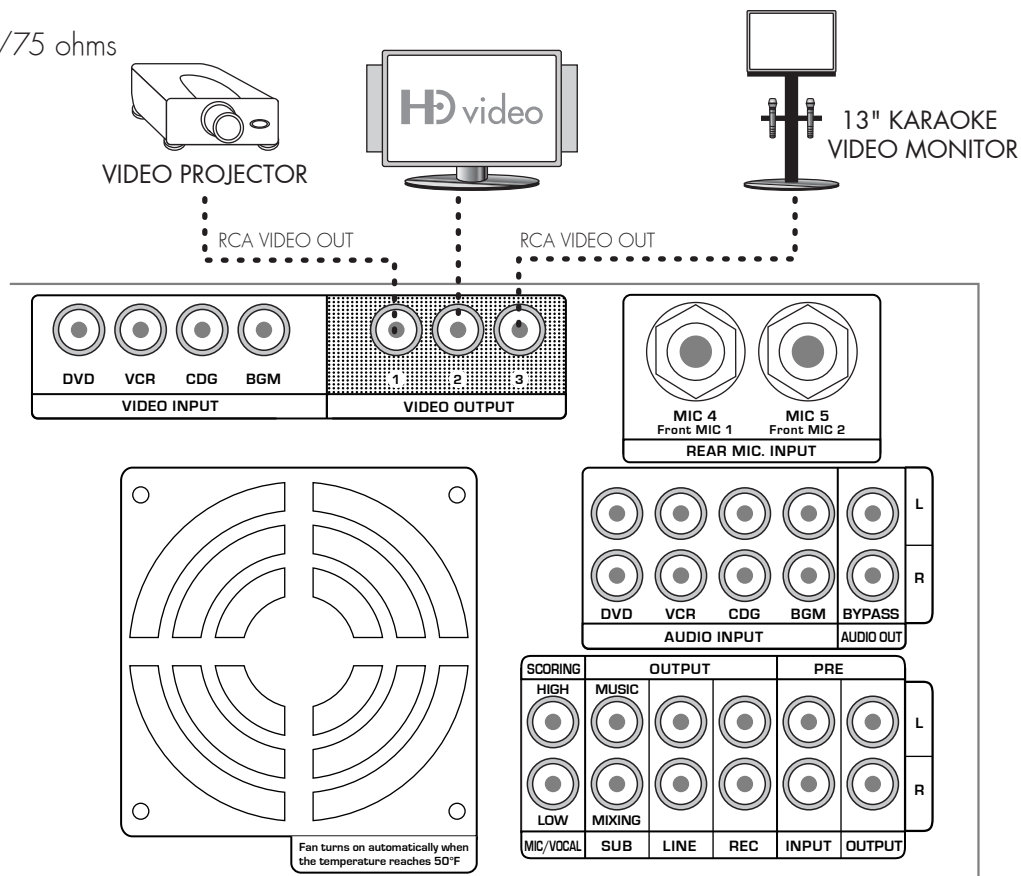



## HOW TO CONNECT MUSIC A.V. SOURCE

Before you connect the source (i.e. DVD, VCR, CDG and BGM Karaoke), you should turn off the power for all machine, so it would protect you from electric shock and prevent the equipment from damage. To connect the AV source, the first thing to do is to connect the audio source to the amplifier input. Then, you can connect the video source. Please refer to the following diagram. To ensure high quality sound and video, we recommend using high quality cables. To learn more about high quality cable, please refer to page 30.

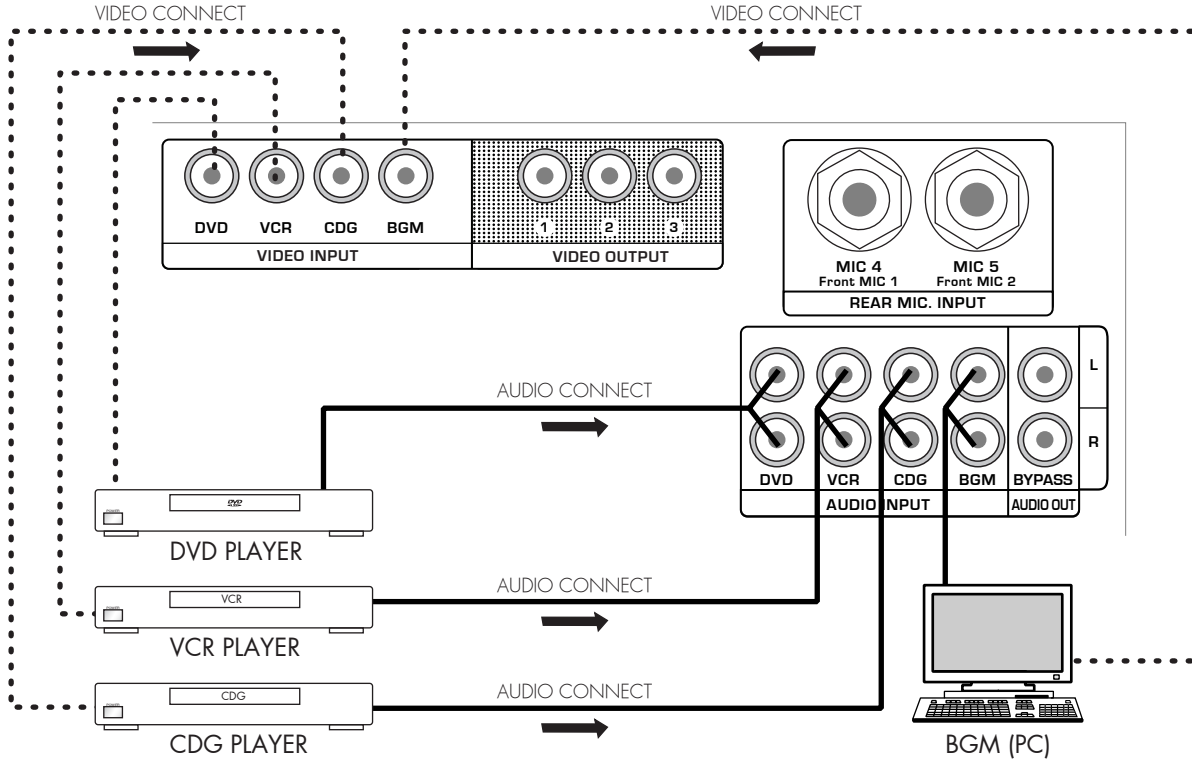

## HOW TO CONNECT SUB WOOFER

SUB OUT has two different signal outputs: MUSIC on the top and MIXING on the bottom. MUSIC can create music bass in low frequency, but it cannot affect the vocal. It is good for Karaoke singing.

MIXING can create both music and vocal with bass in low frequency. You have choice for different bass effects on MUSIC and MIXING.

