



HOW TO CONNECT RECEIVER

DIAGRAM 1

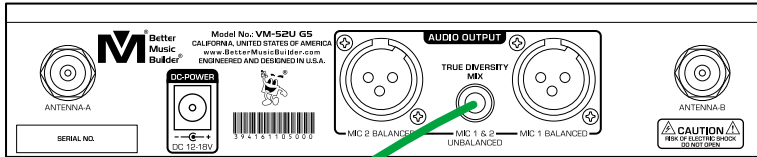

RECEIVER REAR VIEW

Unbalanced Mixed Connection

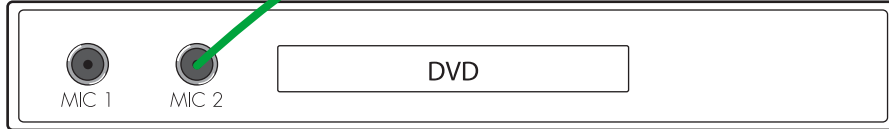


DVD KARAOKE PLAYER



Standard Connection:
Unbalanced 1/4
connection


Better Music Builder
recommend you to use
the best connection for
your system.

DIAGRAM 2

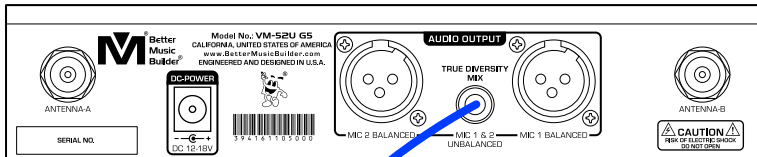


RECEIVER REAR VIEW

Unbalanced Mixed Connection

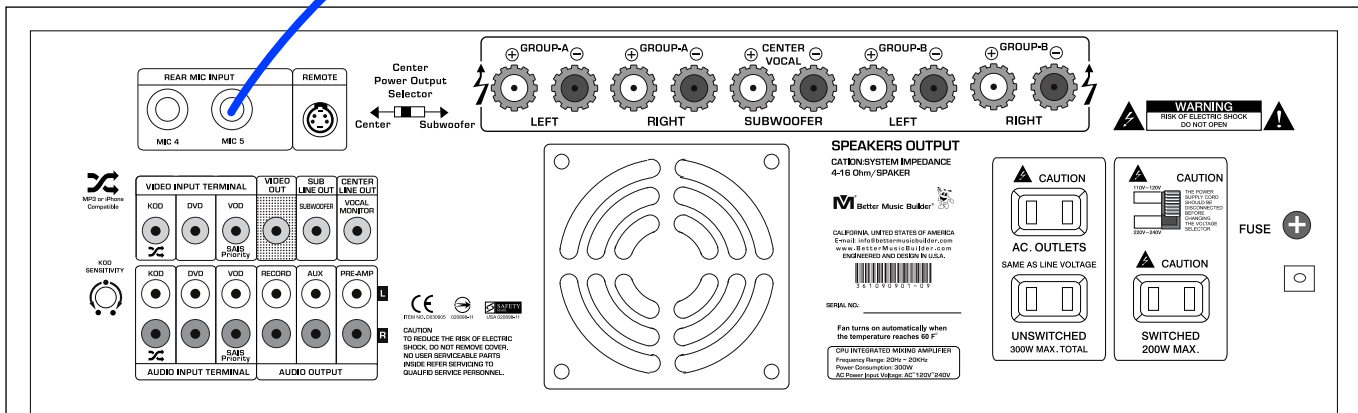


AMPLIFIER

DIAGRAM 3 SEPARATE MIC OUTPUT

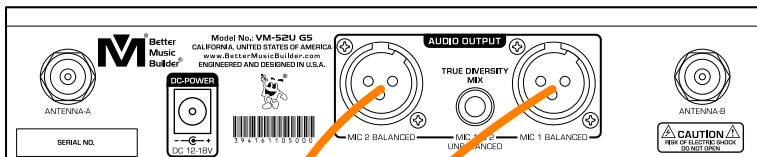

RECEIVER REAR VIEW

Balanced Connection

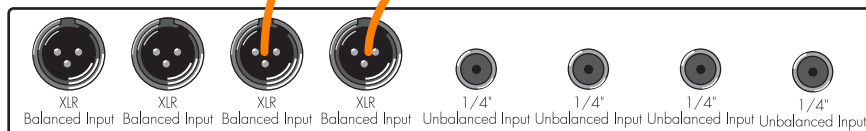

AUDIO MIXER AMPLIFIER OR A KARAOKE UNIT INPUT TERMINAL

Better Music Builder
recommend you to use
the best connection for
your system.

Optional: XLR balanced cable



Best Connection: Balanced 3-Pin XLR connection to
prevent outside noise
and upholds vocal clarity.