

 
 
Better Music Builder is a leader in the Audio and Karaoke equipment industry. We are committed to offering you high quality audio products. Unlike any others brand, we deliver the best cost and value to you directly. We may update our manual on short notice, so we highly recommend downloading the latest update information including operation manuals, installation instructions, and other new technologies updates, etc. from our website www.BetterMusicBuilder.com.

OVAL SERIES 
PRO-LOUDSPEAKER

 
2-Way Pro Speaker

O-6 6-inch WOOFER

O-10 10-inch WOOFER

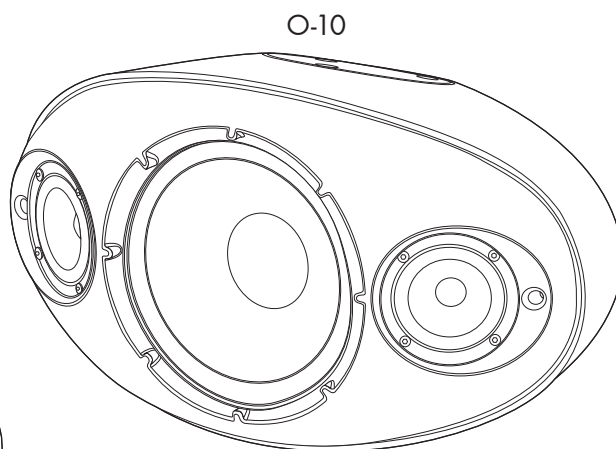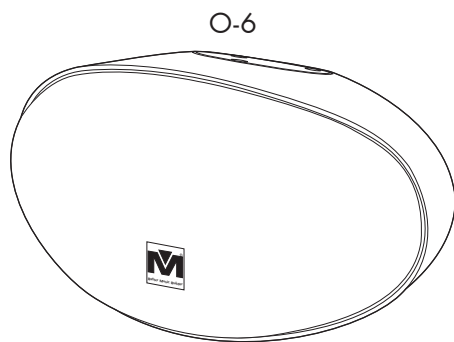



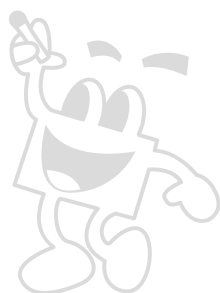











Your stylist Choice



Thank you for purchasing this unit. To make full and effective use of this unit, please read this Owner's Manual carefully before operating it. Please retain this manual for future reference.

CONTENTS

	INTRODUCTION.....	3
	SYSTEM FEATURES.....	3
	SAFETY INSTRUCTIONS.....	4~5
	PACKAGE ACCESSORIES.....	6
	SYSTEM APPLICATIONS.....	6
	• Methods of Speaker Connection.....	6
	• Full Range Applications: Standard Format, Premium Format, Superior Format.....	7
	• Connecting the Speaker with 3-D Positional Audio (Premium Format).....	8
	• Connecting the Speaker with 5-D Pro Audio (Superior Format).....	8
	CONTROLS AND FUNCTIONS.....	9
	• Front & Rear Panel Features for 2-Way Full Range Speaker Model O-6.....	9
	• Front & Rear Panel Features for 2-Way Full Range Speaker Model O-10.....	9
	SYSTEM SETUP GUIDELINES.....	10
	• Installation Setup.....	10
	1. Mounting the Speaker to the Ceiling.....	10
	2. Mounting the Speaker to the Wall.....	11
	3. Placing the Speaker on the Portable Stand.....	12
	4. How to Open Grill Cover.....	12
	PHYSICAL DIMENSIONS.....	13
	SPECIFICATIONS.....	13
	TROUBLESHOOTING.....	14~15
	FINAL WORDS TO USER.....	15
	WARRANTY.....	16
	AGENCY REGULATORY NOTICES.....	17
	CONTACT INFORMATION.....	18



INTRODUCTION

Better Music Builder is proud to introduce a high-end Oval Series speaker line to the consumers in North America. This Oval Series speaker has two models (one with 6-inch woofer and the other with 10-inch woofer) in compact size with fashionable appearance and excellent vocal sound for singing. They are suitable for commercial use especially for classy nightclubs and bars.

The Oval Series speaker is also good for home entertainment. They work perfectly with both 3-channel and 5-channel amplifiers for both karaoke singing and home theater. Better Music Builder provides with you with high quality 3 and 5-channel amplifiers DX-222 G2 and DX-288 G2 (Generation Two) to match this Oval Series speakers.

The Oval Series is 2-way full range speaker system (both 6-inch O-6 Speaker and 10-inch O-10 Speaker) with wide dispersion. Its sound is natural and clear while the cabinet is handy and compact with fashionable appearance. It can be applicable in both small and medium sound format.

The Oval Series adopts two 3-inch new paper cone high frequency speakers which greatly enhance the performance and power loading capacity in the both mid and high frequencies. Both O-6 and O-10 speaker optimized the low frequency driver that can realize highest clearance and lowest distortion in high sound pressure. The 12 dB attenuation slope cross frequency circuit enables smooth frequency response. And the full range circuit protecting system provides higher security.

The cabinet is injection molded with high intensity polypropylene. The delicate designed shape provides best structure strength and acoustic characteristics. There are four colors for the grill of the O-6 and O-10: red, silver, black and brown for your choice.



 
SYSTEM FEATURES

2-WAY FULL RANGE PRO SPEAKER: O-6

- 2x3" tweeters [paper cone mid-high frequency drivers]
- 1x6" woofer [low frequency woofer]
- High intensity injection moulding cabinet
- Dispersion 140° x 160°
- Frequency response 80Hz~16kHz (-3dB)
- Sensitivity 88dB, Max SPL 120 dB
- Round hanging cover: Three 8mm screws size
- The cabinet is made from high intensity PP, the color for cabinet and grill are various options (Red / Silver / Black / Brown).

2-WAY FULL RANGE PRO SPEAKER: O-10

- 2x4" tweeters [paper cone mid-high frequency drivers]
- 1x10" woofer [low frequency woofer]
- High intensity injection moulding cabinet
- Dispersion 120° x 120°
- Frequency response 45Hz~20kHz (-3dB)
- Sensitivity 90dB, Max SPL 123 dB
- Round hanging cover: Three 8mm screws size
- The cabinet is made from high intensity PP, the color for cabinet and grill are various options (Red / Silver / Black / Brown).

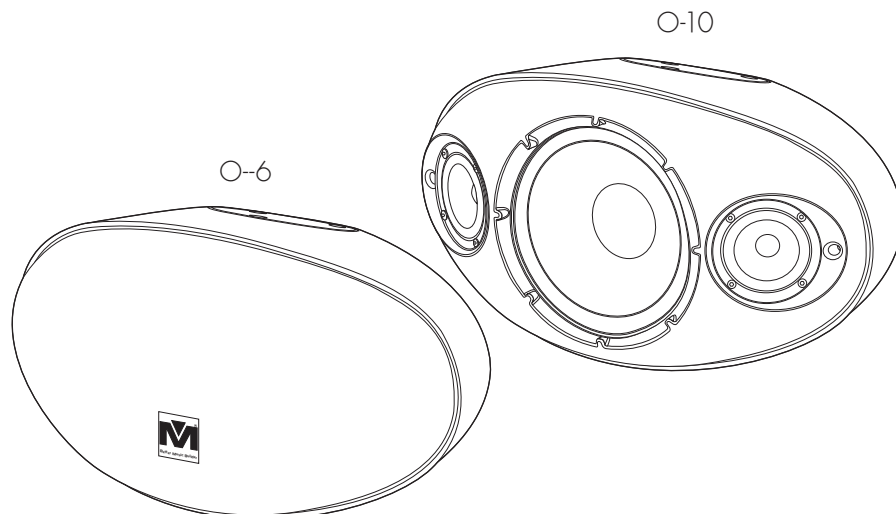



SAFETY INSTRUCTIONS

We will not notify you any errors or changes in this manual in advance. If there are any errors and changes in this manual, we will make the corrections in a timely manner. The corrections and changes will be appeared in our website. Therefore, please visit our website at BetterMusicBuilder.com frequently to find out the most updated information, corrections on errors and changes in this manual. You may also contact us at toll free at 1-800-318-2218.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN 
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED PERSONNEL

CAUTIONS FOR INSTALLATION

POWER SUPPLY / POWER CORD

- Only use the voltage specified as correct for the device. The required voltage is printed on the name plate of the device.
- Use only the included power cord.
- Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.
- Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.
- When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.

DO NOT OPEN

- Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Better Music Builder service personnel.

WATER WARNING

 
- Do not expose the device to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into an openings.
- Never insert or remove an electric plug with wet hands.

ABNORMALITY

- If the power cord or plug becomes frayed or damaged, or if there is a sudden loss of sound during use of the device, or if any unusual smells or smoke should appear to be caused by it, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Better Music Builder service personnel.
- If this device should be dropped or damaged, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Better Music Builder service personnel.

LOCATION

- Always consult qualified Better Music Builder service personnel if the device installation requires construction work, and make sure to observe the following precautions.
- Choose mounting hardware and an installation location that can support the weight of the device.
- Avoid locations that are exposed to constant vibration.

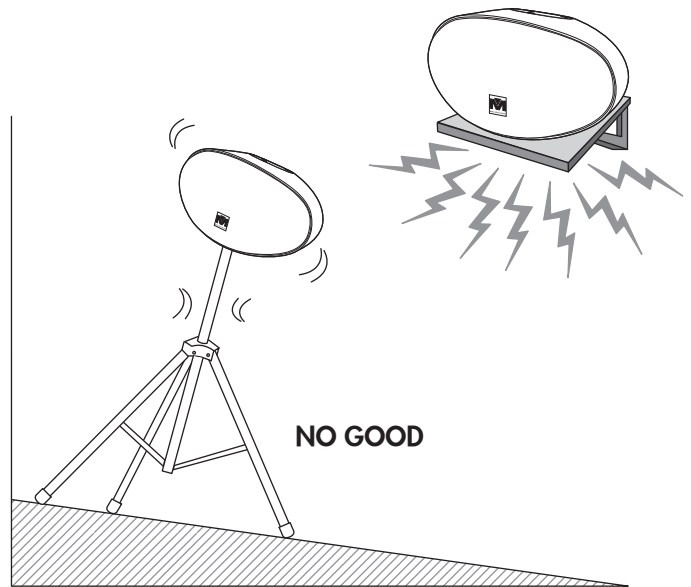

- Inspect the device periodically.
- When transporting or moving the device, always use two or more person. Attempting to lift the device by yourself may damage your back, result in other injury, or cause damage to the device itself.
- Before moving the device, remove all connected cables.
- Do not use the device in a confined, poorly-ventilated location. If this device is to be used in a small space other than an EIA-standard rack, make sure that there is adequate space between the device and surrounding walls or other devices; at least 30cm at the sides, 30cm behind and 30cm above. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.

- Do not use the speaker's handles for suspended installation. Doing so can result in damage or injury.
- Do not expose the device to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel disfiguration or damage to the internal components.
- Do not place the device in an unstable position where it might accidentally fall over.

CONNECTIONS

- Before connecting the device to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.

CAUTION

- When turning on the AC power in your audio system, always turn on the device LAST, to avoid speaker damage. When turning the power off, the device should be turned off FIRST for the same reason.
- Do not insert your fingers or hands in any gaps or openings on the device (ports, etc.).
- Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (ports, etc.). If this happens, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Better Music Builder service personnel.
- Do not use the device for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
- Do not operate the device if the sound is distorting. Prolonged use in this condition could cause overheating and result in fire.
- Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors.

GETTING STARTED

WIRING

IMPORTANT: Make sure all equipment is turned off before making any connections.

For speaker connections, use a high-quality speaker wire with polarity coding. The side of the wire with a ridge or other coding is usually considered positive polarity.

NOTE If desired, consult Better Music Builder technical support for speaker wire and connection options.

The speakers have coded terminals that accept a variety of wire connectors.

To ensure proper polarity, connect each + terminal on the back of the amplifier or receiver to the respective + (red) terminal on each speaker. Connect the – (black) terminals in a similar way. See the owner's guides that were included with your amplifier, receiver and television to confirm connection procedures.

IMPORTANT: Do not reverse polarities (i.e., + to – or – to +) when making connections. Doing so will cause poor imaging and diminished bass response.

ADJUSTING

Check the speakers for playback, first by setting the system volume control to a minimum level, and then by applying power to your audio system. Play a favorite music or video segment and increase the system volume control to a comfortable level.

NOTE You should hear balanced audio reproduction across the entire frequency spectrum. If not, check all wiring connections or consult the authorized dealer from whom you purchased the system for more help.

The amount of bass you hear and the stereo-image quality will be affected by a number of different factors, including the room's size and shape, the construction materials used to build the room, the listener's position relative to the speakers, and the position of the speakers in the room.

Listen to a variety of music selections and note the bass level. If there is too much bass, move the speakers away from nearby walls. Conversely, if you place the speakers closer to the walls, there will be more bass output.

 
CARING

Each enclosure has a finish that does not require any routine maintenance. When needed, use a soft cloth to remove any fingerprints or dust from the enclosure or grille.




PACKAGE ACCESSORIES


The Package comes with one speaker, one mounting kit and four screws. All other accessories mentioned in the manual for installation purpose are not included. They are sold separately.

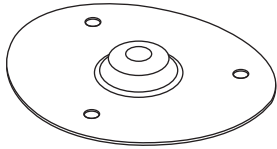

Mounting Kit: 1 pc

 

6mm Screw: 4 pcs for mounting bracket

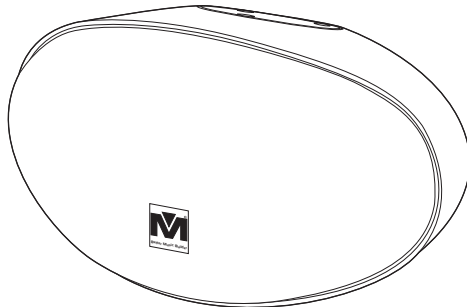 


Speaker: 1 pc



Consumer warranty and registration card
 
<Mail in U.S.A. only> Consumers from Canada can get the warranty card by downloading it from our website www.BetterMusicBuilder.com.

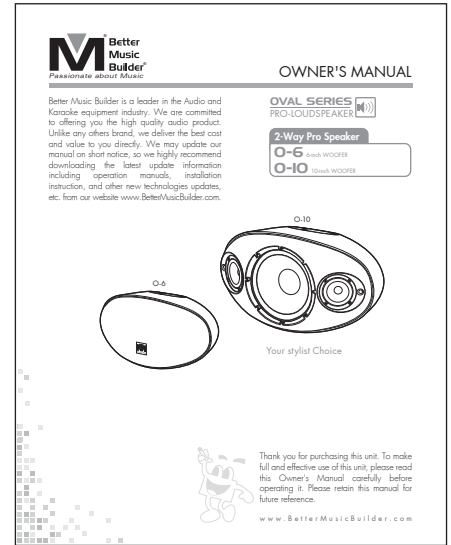

Owner's Manual



SYSTEM APPLICATIONS

SPEAKON Y CONNECTORS

TO CHANNEL 2 SPEAKER TO CHANNEL 1 SPEAKER

Speakon Outputs

The upper Speakon jack has both Channel 1 and Channel 2 outputs, so it is especially useful for parallel, bi-amp, or BRIDGE mono operation. The other Speakon carries only Channel 2's output. See the illustrations at above.

SPEAKON CONNECTORS

 
SOURCE (from active/powerd) BRIDGE

REFERENCE CONNECT

NOTE A speakon cable is required to connect the "OUTPUT" of the active/powerd speaker to the "INPUT" of the passive/non-powerd speaker. Please order the speakon cable from our authorized dealers.

FULL RANGE APPLICATIONS


STANDARD FORMAT

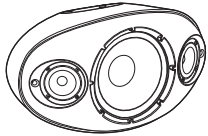


2-WAY FULL RANGE SPEAKER
O-6

Standard Format is a small format for sound performance. It is recommended using five O-6 speakers for home theater and karaoke singing. O-6 and O-10 speakers can also be used for commercial especially for small nightclubs and bars.

 PREMIUM FORMAT

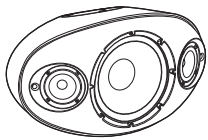


+

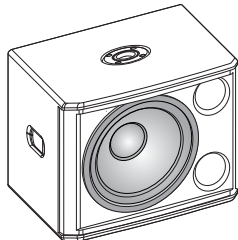 


2-WAY FULL RANGE SPEAKER O-6 BASS POWERED SUBWOOFER
DFS-112 SUB

Premium Format is another format for high sound performance. Under this format, it is recommended using five O-6 speakers with a power subwoofer for home theater and karaoke singing for strong bass. This format by using O-6 and O-10 speakers are good for commercial especially for nightclubs and bars.

 
SUPERIOR FORMAT

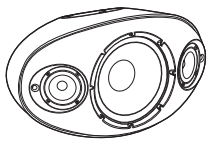

+

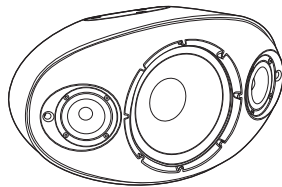 

+

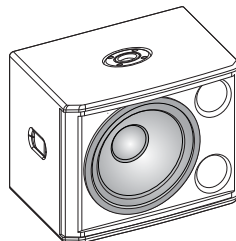 

2-WAY FULL RANGE SPEAKER O-6 2-WAY FULL RANGE SPEAKER O-10 BASS POWERED SUBWOOFER
DFS-112 SUB

Superior Format is the supreme format for sound performance. Under this format, it is recommended using both O-6 and O-10 speakers and also a power subwoofer to produce high level power output for home theater and karaoke singing. This superior format is good for commercial especially classy and elegant nightclubs and bars. Please refer to page 8 for detailed diagram.

2-WAY FULL RANGE SPEAKER
O-6

FREQUENCY RANGE

HI
0W
800W
▲

0W
1000W

MID
0W
500W
▲

0W
1000W

LOW
0W
300W
▲

 
0W
1000W

BASS POWERED SUBWOOFER
DFS-112 SUB

FREQUENCY RANGE

LOW/
BASS
0W
800W
▲

0W
1000W

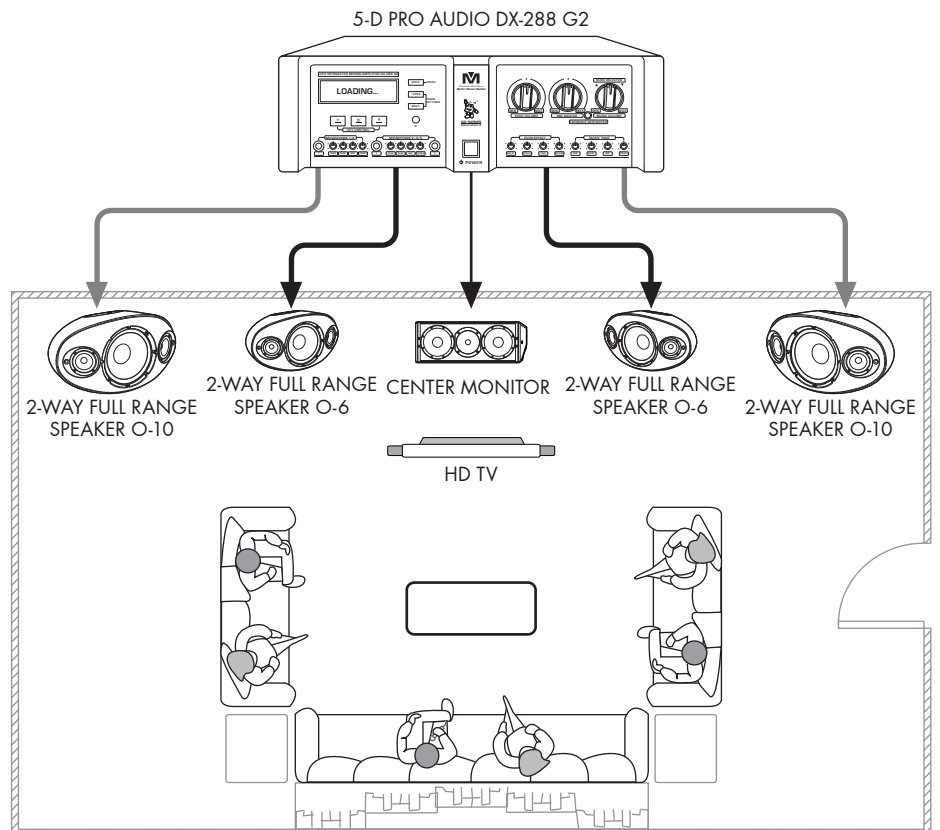


CONNECTING THE SPEAKER WITH 3-D POSITIONAL AUDIO (PREMIUM FORMAT)

Please refer to the diagram on the right for connecting the speakers to the 3-D Positional Audio system designed by the Better Music Builder engineering team.

With 3-D Positional Audio technology, user can actually experience the following effects:

 
- Music and sound effects are live-like and real.
- Sound remains clear at low volume.
- Reveals natural depth and details.
- Music is natural and brilliant with strong bass.
- Superior dialog clarity.

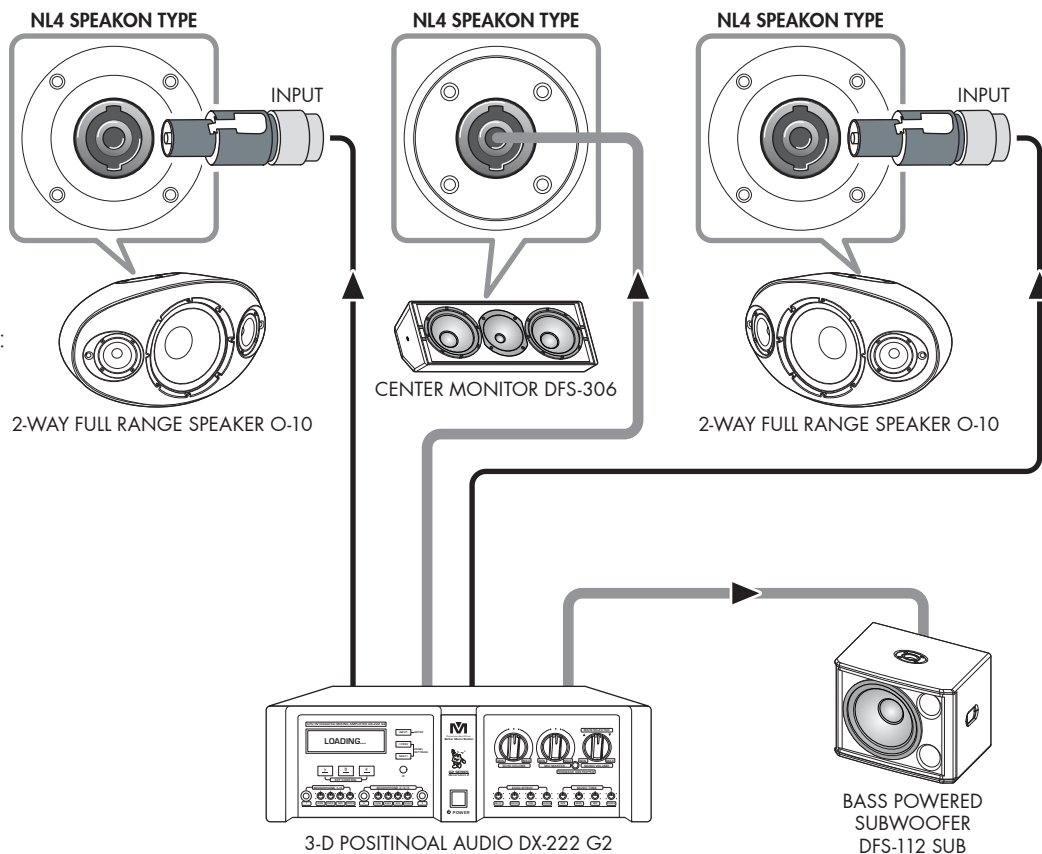

CONNECTING THE SPEAKER WITH 5-D PRO AUDIO (SUPERIOR FORMAT)

Please refer to the diagram on the right for connecting the speakers to the 5-D Pro Audio system designed by the Better Music Builder engineering team.

 The concept of 5-D Pro Audio technology is the same as that of the 3-D Positional Audio technology. The 5-D Pro Audio technology factors in the echo and reverb generated by the size and shape of the room as well as the materials used in the construction of the room into the Digital Signal Processing equation. The control feedback can easily be done from the front panel as with the adjustment of vocal and music effects between the center and main speakers.

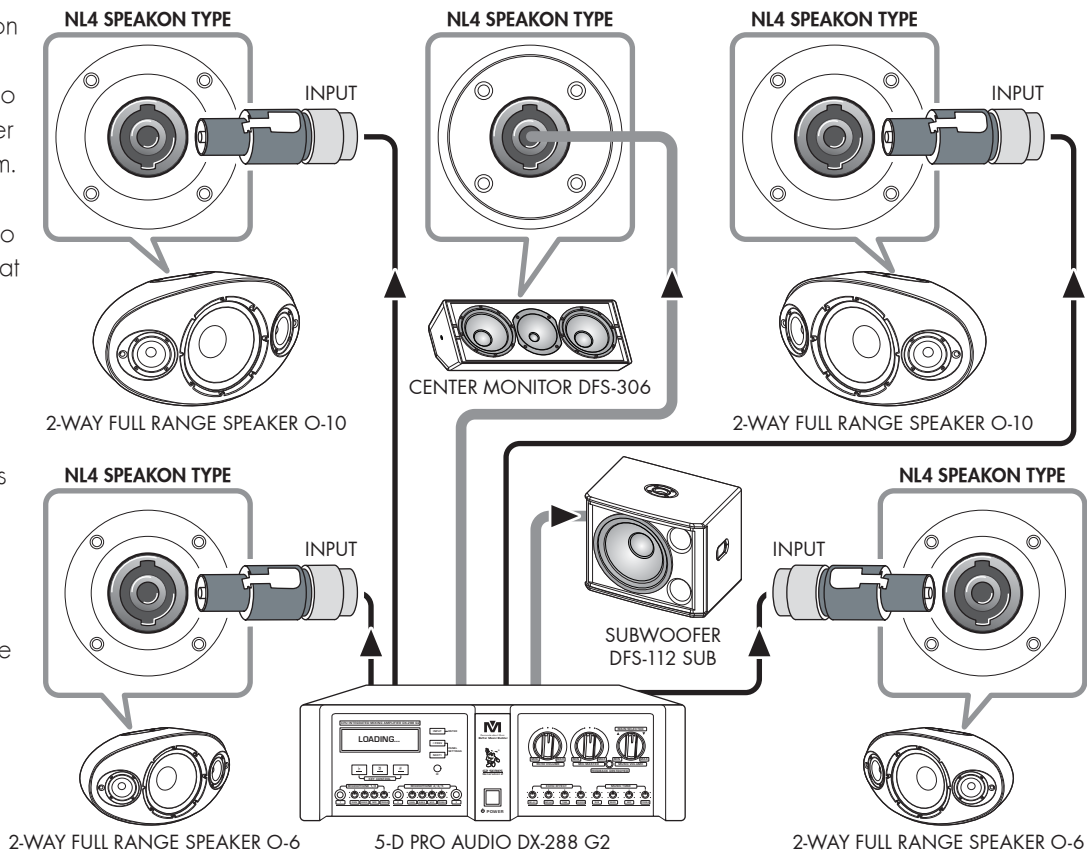





CONTROLS AND FUNCTIONS

FRONT & REAR PANEL: features are available for 2-WAY FULL RANGE SPEAKER model O-6

 
O-6

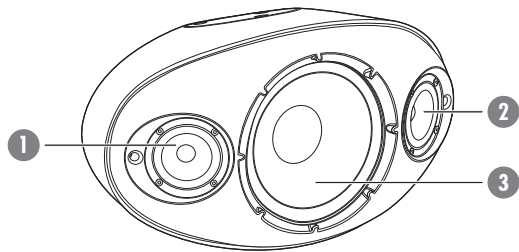

O-6 Front View


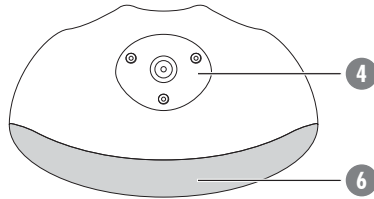 


O-6 Top View

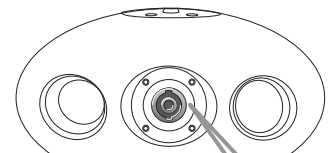 

O-6 Rear View

  
- 1 **3-INCH TWEETER:** PAPER CONE MID-HIGH FREQUENCY DRIVER
- 2 **3-INCH TWEETER:** PAPER CONE MID-HIGH FREQUENCY DRIVER
- 3 **6-INCH WOOFER:** PAPER CONE LOW FREQUENCY DRIVER
- 4 **ROUND HANGING COVER:** THREE 8mm SCREW SIZE
- 5 **SPEAKER INPUT TERMINAL (NL4 Speakon TYPE)**
- 6 **FRONT GRILL COVER:** AVAILABLE IN FOUR COLORS [RED / SILVER / BLACK / BROWN]

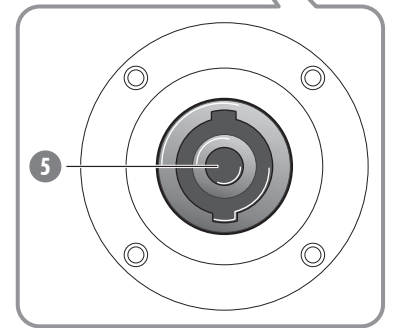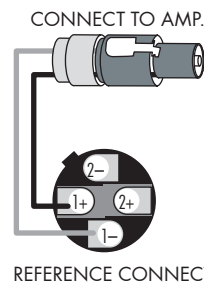


O-6 Rear Connector

FRONT & REAR PANEL: features are available for 2-WAY FULL RANGE SPEAKER model O-10

 
O-10

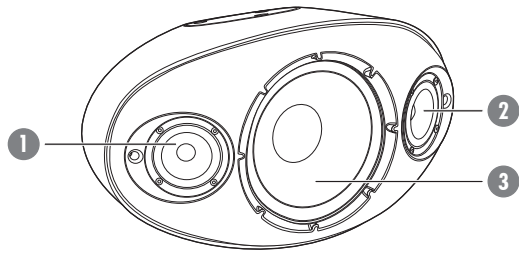

O-10 Front View


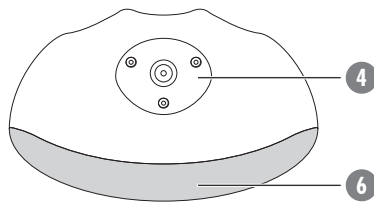 


O-10 Top View

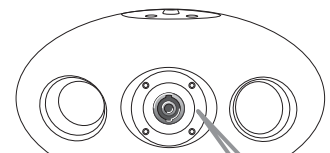 

O-10 Rear View

  - 1 **4-INCH TWEETER:** PAPER CONE MID-HIGH FREQUENCY DRIVER
- 2 **4-INCH TWEETER:** PAPER CONE MID-HIGH FREQUENCY DRIVER
- 3 **10-INCH WOOFER:** PAPER CONE LOW FREQUENCY DRIVER
- 4 **ROUND HANGING COVER:** THREE 8mm SCREWS SIZE
- 5 **SPEAKER INPUT TERMINAL (NL4 Speakon TYPE)**
- 6 **FRONT GRILL COVER:** AVAILABLE IN FOUR COLORS [RED / SILVER / BLACK / BROWN]

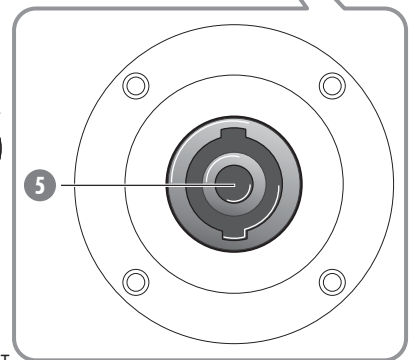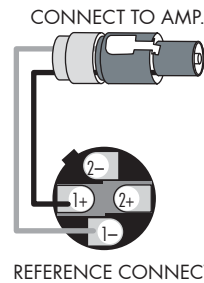

O-10 Rear Connector



SYSTEM SETUP GUIDELINES

INSTALLATION SETUP

 
Follow the steps described in the diagram for mounting the speaker to the ceiling and wall. Use the right screws to mount the speaker onto the ceiling or wall.

Please note that the ceiling and wall mounting accessories and tools are not included in the package. You may order it separately from our authorized dealers.


1. MOUNTING THE SPEAKER TO THE CEILING

STEP 1: Hold the ceiling mount panel under the ceiling, then put four screws to fasten it.


NOTE The structure of the ceiling must be strong enough to hold at least 50 pounds.

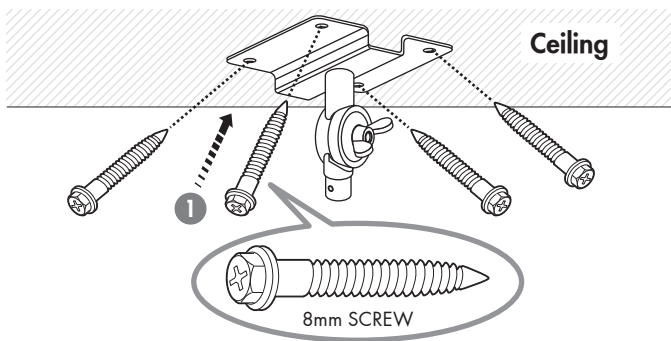

 STEP 2: Four 6-mm screws come with the package. Three 6-mm screws already mounted on the speaker top. Only one 6-mm screw is provided for mounting kit as indicated in the following diagram.


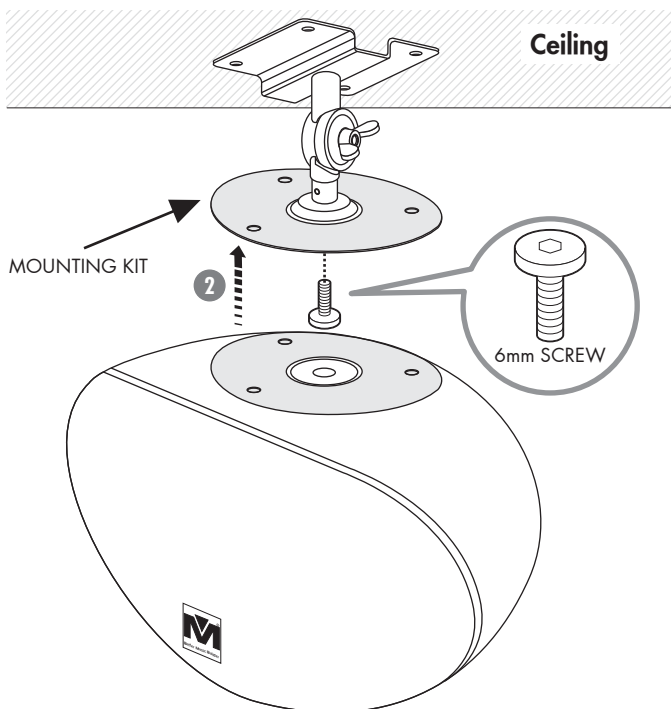


 STEP 3: Place the ceiling mount panel on the top of the speaker cabinet and put three screws to fasten it.

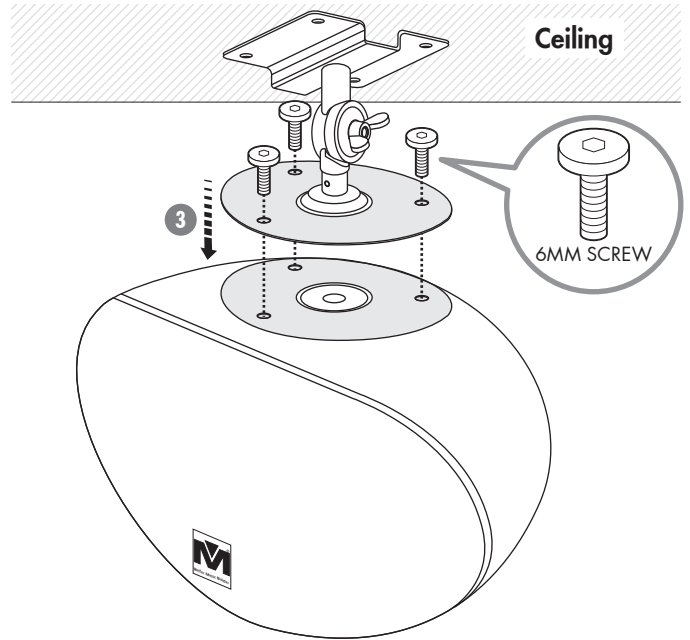

CEILING MOUNT BRACKET

  The ceiling mount bracket is optional. You may order it from our authorized dealers near you. Please note that the ceiling mount is different from the wall mount.

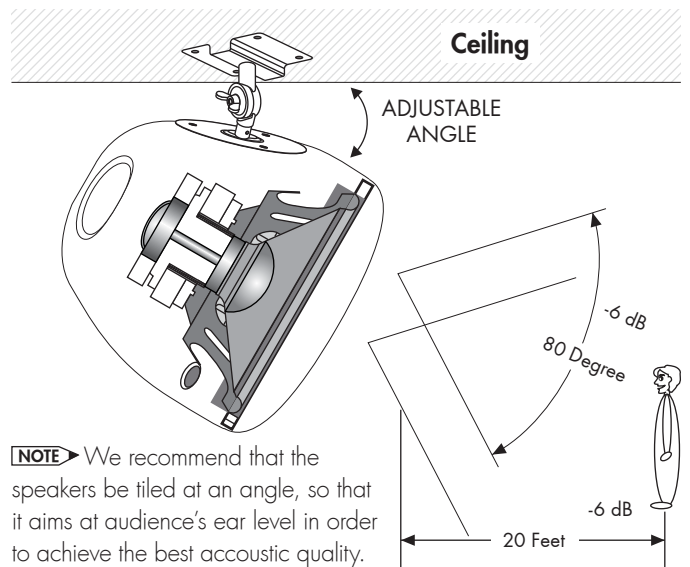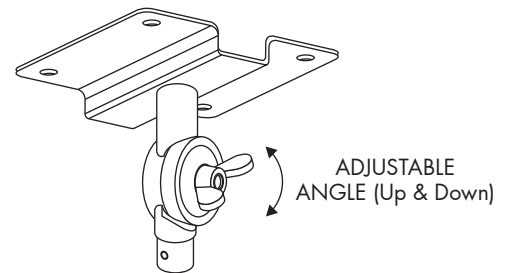


NOTE We recommend that the speakers be tilted at an angle, so that it aims at audience's ear level in order to achieve the best accoustic quality.


2. MOUNTING THE SPEAKER TO THE WALL

STEP 1: Place the wall mount panel on the wall and put three or more screws to fasten it.

 
NOTE The structure of the wall must be strong enough to hold up to 100 pounds.

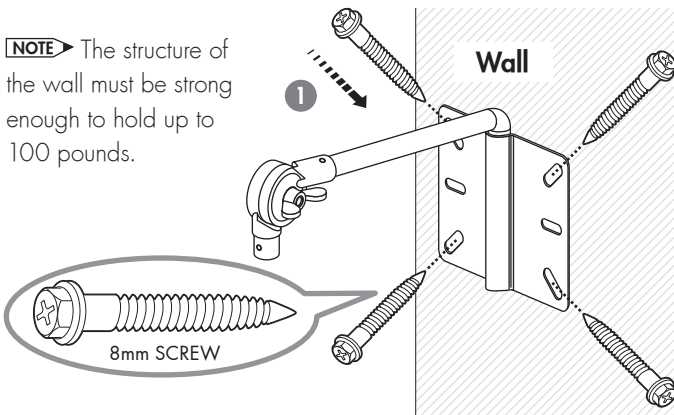

 
STEP 2: One 6-mm screw is provided for mounting kit as indicated in the following diagram. Make sure that you use the right kinds of screws to mount the speaker onto the wall or ceiling which are made up of different construction materials (i.e. wood or concrete, etc.).

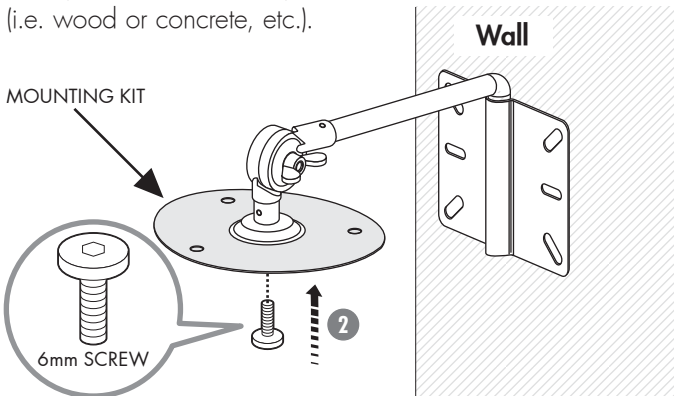

 STEP 3: Place the wall mount panel on the top of the speaker cabinet and put three screws to fasten it.

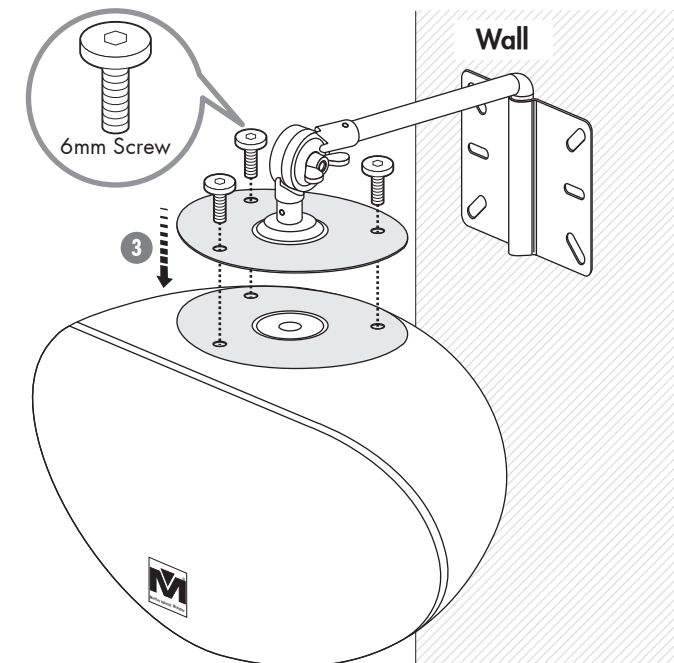


 This Wall Mount Bracket can be a Ceiling Mount Bracket

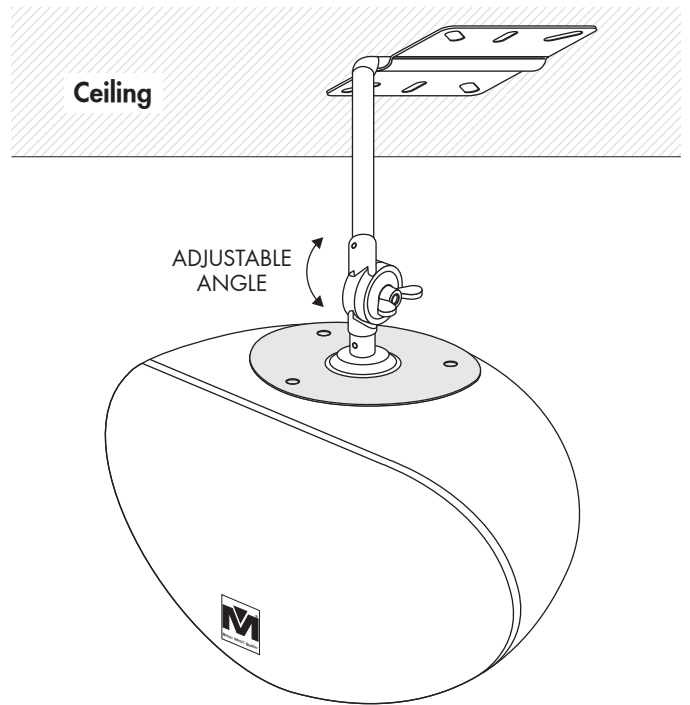


CEILING MOUNT BRACKET

 The wall mount bracket is optional. You may order it from our authorized dealers near you. Please note that the wall mount is different from the ceiling mount.

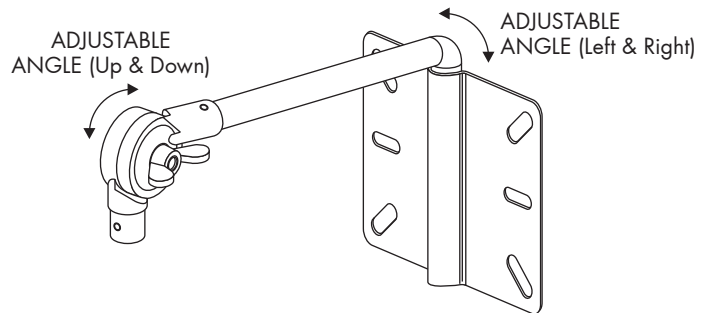

Mounting to Solid Wood or Wood Studs

 In North America, most of the houses have 2"x4" wood studs inside the panel walls. You may use stud finder to locate the wood studs. Then, you can drive the screw into the wood stud to mount the speaker bracket and hold it firmly.

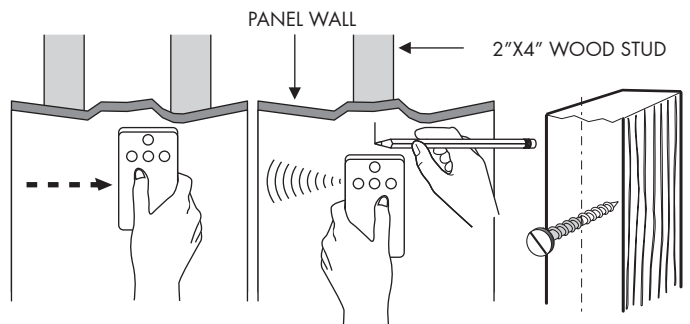


3. PLACING THE SPEAKERS ON THE PORTABLE STAND

The speakers can be mounted on to the optional portable stand, (see figure below). Make sure that the mounting system (hardware, stand, etc.) is capable of supporting four times the weight (approximately 25 lbs per speaker) of the speakers.

Floor Stand Mounting Kit Bracket

 The speaker mount bracket for floor stand is optional. You may order it from our authorized dealers near you. Please note that the wall mount is different from the ceiling mount.

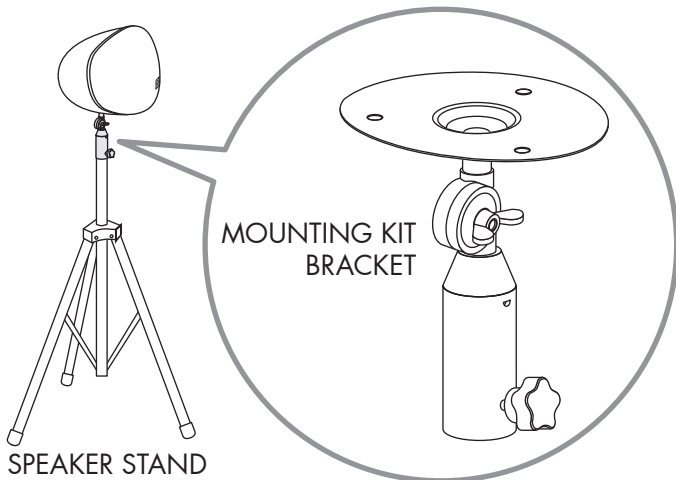

SPEAKER STAND

 
Part Number: AMS001B (Optional)

4. HOW TO OPEN GRILL COVER

STEP 1: Clench fist, and then knock the upper-right side of the cabinet with fist.

STEP 2: After the cabinet was knocked, the grill cover will be loosened and there will have a small gap between the cabinet and grill cover.

STEP 3: Insert a straight screwdriver into the gap, and pry the grill cover off the cabinet with the straight screwdriver.

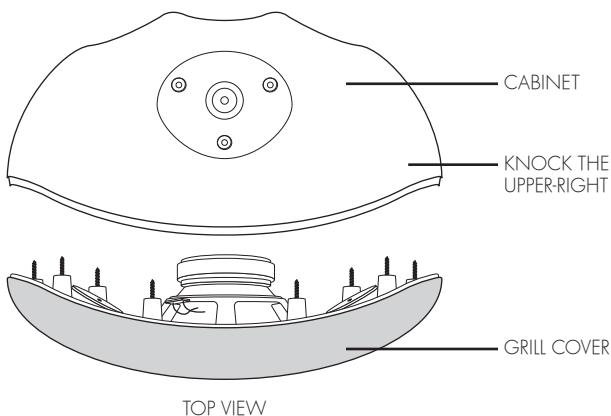

PARTS FOR MAINTENANCE

For repair and maintenance, you can order the following parts indicated with numbers below from our authorized dealers. The following parts include:

- 1 FRONT GRILL COVER:** O-6 Part Number: 360EDO6COV-R
O-6 Part Number: 360EDO6COV-W
O-6 Part Number: 360EDO6COV-BL
O-10 Part Number: 360EDO10COV-R
O-10 Part Number: 360EDO10COV-W
O-10 Part Number: 360EDO10COV-BL

 
- 2 CABINET:** O-6 Part Number: 360EDO6CNT
O-10 Part Number: 360EDO10CNT

- 3 WOOFER (LF):** O-6 Part Number: 06TP035-8
O-10 Part Number: 10LB075-U


- 4 TWEETER (HF):** O-6 Part Number: 20100428
O-10 Part Number: ED4001A

- 5 CROSSOVER:** O-6 Part Number: QS600ND100525048
O-10 Part Number: EGS015-42-B

1 FRONT GRILL COVER

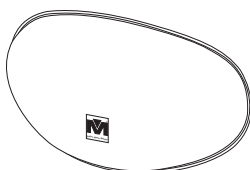

2 CABINET

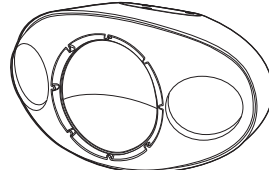 


3 WOOFER (LF)



FRONT VIEW

BACK VIEW

 
4 TWEETER (HF)

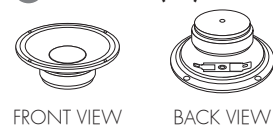


FRONT VIEW

BACK VIEW

 5 CROSSOVER

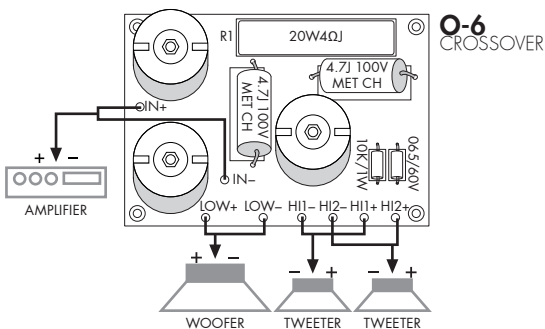

O-6 CROSSOVER

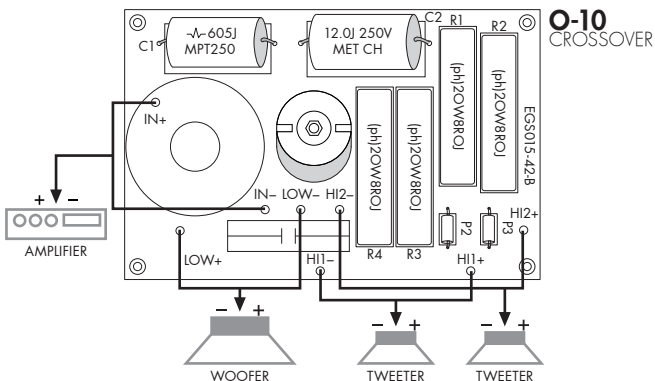 


O-10 CROSSOVER



PHYSICAL DIMENSIONS

2-WAY FULL RANGE PRO SPEAKER		
MODEL	O-6	O-10
NET WEIGHT	9.9 lbs / 4.5 Kg (each)	19.8 lbs / 9 Kg (each)
SHIPPING WEIGHT	11 lbs / 5 Kg (each)	24.3 lbs / 11 Kg (each)
DIMENSIONS (WXHXD)	15.7x9x9.4 in 40x23x24 cm	21.7x12.4x13.2 in 55x31.6x33.6 cm
PACKING DIMENSIONS (WXHXD)	17.8x10.6x12.2 in 45.2x27x31 cm (each)	24.4x15.2x16.7 in 62x38.5x42.5 cm (each)

 
O-6

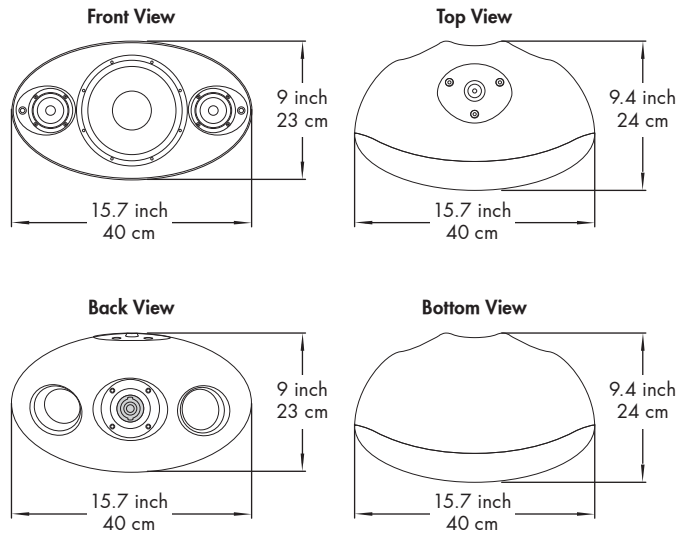


SPECIFICATIONS

2-WAY FULL RANGE PRO SPEAKER		
MODEL	O-6	O-10
COLOR AVAILABLE RED SILVER BLACK BROWN		
TYPE	Front	Front
MAX. POWER HANDLING	160~320 Watts	300~600 Watts
CABINET TYPE	Polypropylene Injection Moulding	Polypropylene Injection Moulding
SUPPORTED FIXTURE	Ceiling Mount, Wall Mount, Floor Stand	Ceiling Mount, Wall Mount, Floor Stand
WOOFER [LF]	6" (1 unit)	10" (1 unit)
TWEETER [HF]	3" (2 unit)	4" (2 unit)
"SPOT" RANGE	Compression Driver	Compression Driver
FREQUENCY RESPONSE	80Hz ~ 16kHz	45Hz ~ 20kHz
SENSITIVITY	88 dB	90 dB
CROSSOVER FREQUENCY	2.5 kHz	2.5 kHz
HIGHLIGHTED FEATURES	Dynamic Vocal Effect	Dynamic Vocal Effect

 
Side View

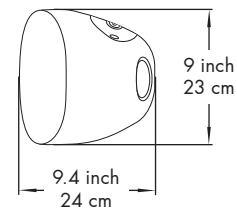

O-10

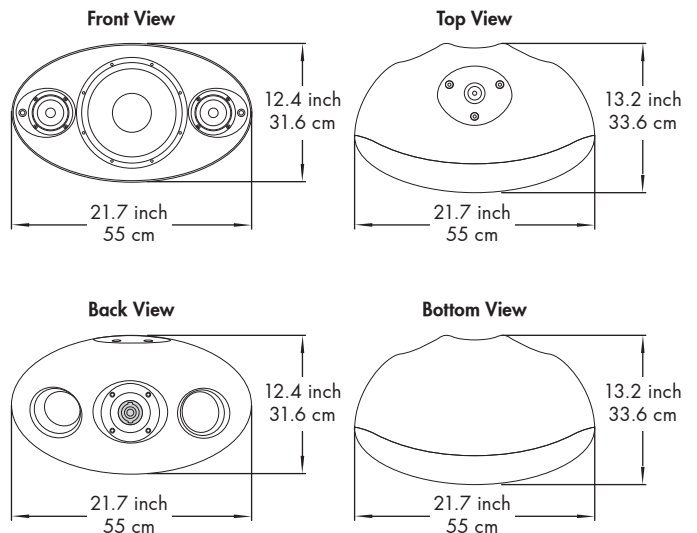 

Side View

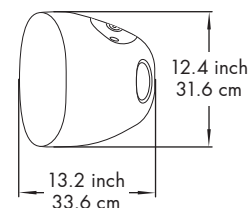 



TROUBLESHOOTING

1. SYMPTOM: NO SOUNDS COMING OUT FROM THE SPEAKERS

Probable cause:

1. The A/C power of the speaker is not turned on.
2. Choose the wrong A/C power selection (i.e. 110V~220V).

Remedy:

- A. Turn on the A/C power of the speaker.
- B. Check the receiver or amplifier if it is on and the source is playing.
- C. Check all wires and connections between receivers, amplifiers and speakers. Make sure all wires are connected. None of the speaker wires are frayed, cut or punctured, and no wires are touching each other.
- D. Review proper operation of your receiver or amplifier.
- E. Choose the right A/C power.

2. SYMPTOM: NO SOUNDS COMING OUT FROM ONLY ONE SPEAKER

Probable causes:

The A/C power of the speaker is not turned on.

Remedy:

- A. Check the "Balance" control on your receiver or amplifier.
- B. Check all wires and connections between receiver, amplifier and speaker. Make sure all wires are connected. Make sure none of the speaker wires are frayed, cut or punctured, and that no wires are touching each other.
- C. In Dolby® Digital or DTS® mode, make sure that the receiver or processor is configured so that the speaker in question is enabled.
- D. Turn off all electronics and switch the speaker in question with one of the other speakers that is working correctly. Turn everything back on, and determine whether the problem is in the same place: i.e., the speaker that was working previously now has no sound and the speaker that was not working now sounds fine; or whether it has moved; i.e., the speaker that was not working still has no sound and the speaker that was working is still fine. If the problem is in the same place, the source of the problem is most likely with your receiver or amplifier, and you should consult the owner's manual further information. If the problem has followed the speaker, consult your dealer for further assistance, or visit our web site for technical support.

3. SYMPTOM: NOISES FROM THE SPEAKER.

Probable causes:

The A/C power cord of the speaker is not grounded.

Remedy:

Change a new magnet cord of the A/C power cord.

4. SYMPTOM: MICROPHONE VOLUME IS TOO LOW.

Probable causes:

- A. The microphone is poorly connected to the speaker.
- B. The volume on the speaker is too low.

Remedy:

- A. Check the connection between the microphone and the speaker. Make sure that they are connected properly. For condense microphone, it doesn't work with the speaker. You may need to change to a dynamic vocal microphone.
- B. Turn the volume to an appropriate level. If the volume is still not high enough, you may need to upgrade your existing audio system to a system with much higher output.

5. SYMPTOM: CRACKING NOISES FROM THE SPEAKER.

Probable causes:

The tweeter may burn out.

Remedy:

Change a new tweeter.

Note: we recommend you hiring a professional to help you change a tweeter in order to do it properly.

6. SYMPTOM: SOUNDS LIKE DAZZ, DAZZ, DAZZ COMING FROM THE SPEAKER.

Probable causes:

The speakon cable (with small gauges) is over 100 feet for connection.

Remedy:

Change to a cable with 12 or 14 gauges or a high quality cable with bigger size.

7. SYMPTOM: TOO MUCH MICROPHONE FEEDBACK FROM THE SPEAKER.

Probable causes:

Incorrect tremble and bass adjustments on the speaker.

Remedy:

Adjust the tremble and bass to an appropriate level to avoid the microphone feedback.



FINAL WORDS TO USER

8. SYMPTOM: NO SOUND FROM THE MAIN SPEAKERS

Probable causes:

Speakon connectors are not connected properly.

Remedy:

Please make sure that the speakon connectors are locked it tight. Please also note that there are two groups of speakon connectors (i.e. Group 1 +1, -1, Group 2 +2, -2). Make sure that your speakers have the multifunction that enable the connection to the Group 2 for different signal inputs. The basic connection is on Group 1 (+1, -1).

9. SYMPTOM: SOMETIMES THE SPEAKERS HAVE NO SOUND.

Probable causes:

When the master volume closes to the maximum level, so the speaker automatically shut down with no sound. It is because this speaker has a built-in auto circuit to protect the speaker when the master volume becomes too high.

Remedy:

Change to a higher power amplifier to work with the speakers. Please make sure the output power of the amplifier can match that of the speakers. Another option is to add more speakers or subwoofers for higher output as below.

1. Add one more loudspeaker.
2. Add one more powered subwoofer.

We highly recommend you hiring an audio professional to advise you on the right engineering for the amplifier and speakers.

The engineering team of Better Music Builder has many years of experience in audio equipment design. The team constantly develops new audio technologies, designs innovative audio and Karaoke equipment to suit your specific needs and provides you great ideas for home entertainment.

Our engineering team also designs audio equipment for commercial use by restaurants, coffee shops, churches, and school auditoriums, etc. If the commercial area for audio equipment installation exceeds 2,000 square feet, we highly recommend you to hire audio professionals to handle the installation in order to avoid risks in breaking the equipment with improper installation and safety protection purposes.

We also provide educational and technical information on audio equipment and technologies. For example, we provide free installation diagrams to make it easier to connect the system. In addition, to get best connections for the sharpest image and sound quality, we provide hot tip for choosing the high quality type of A/V cable connections. Free information on audio equipment and technologies available for download from our website, www.BetterMusicBuilder.com.

Please do not remove the "Yellow Label" in the rear of the machine; otherwise, the warranty will be void automatically. We design it to protect your own safety. If repair and maintenance service is needed, please contact us directly or hire a professional technician. To learn more about the technical aspects, visit our website www.BetterMusicBuilder.com and download the relevant information for review.



Before hooking up the system, turn off the AC powers on all machines including audio/video equipment and TV. Otherwise, it may damage the equipment, especially on the HDTV in which a spot might appeared on the TV screen. After hooking up the system, double check the audio/video connections to ensure that they are connected correctly.

NOTE Sometimes, loose or poor cable quality would affect the microphone effects, picture quality, or even cause the machine to shut down suddenly.

Again, we must thank you for choosing Better Music Builder product. We hope you can make the best use of the machine and enjoy it for years to come. If you have any questions regarding our product, please feel free to contact us at www.BetterMusicBuilder.com.



WARRANTY

ONE-YEAR LIMITED WARRANTY FOR HOME USE EQUIPMENT

Our one-year warranty covers both parts and labors. The warranty becomes effective from the date of your purchase for one year.

Our warranty only covers defects due to product defectiveness with free of defects in materials or workmanship. However, our warranty does not cover defects due to normal wears, damage in transit, improper use, abuse or failure to follow the proper instructions for maintenance. This warranty is void in the event of unauthorized repairs, alternations, modifications and removing of the product label.

Please also note that our warranty does not cover any shipping cost for the return of defective products to us for inspection, repair and maintenance. Our warranty for Better Music Builder products can only be executed in North America.

90-DAY LIMITED WARRANTY FOR PUBLIC AND COMMERCIAL USE EQUIPMENT

Our 90-day warranty applies to speakers, amplifiers, mixers and microphones for both public and commercial use such as restaurant, coffee shop, KTV nightclub, church and school, etc. It covers both parts and labors. The warranty becomes effective from the date of your purchase for 90 days.

Our warranty only covers defects due to product defectiveness with free of defects in materials or workmanship. However, our warranty does not cover defects due to normal wears, damage in transit, improper use, abuse or failure to follow the proper instructions for maintenance. This warranty is void in the event of unauthorized repairs, alternations, modifications and removing of the product label.

Please also note that our warranty does not cover any shipping cost for the return of defective products to us for inspection, repair and maintenance. Our warranty for Better Music Builder products can only be executed in North America.

ADDITIONAL NOTES:

1. Limited warranty for home use equipment is only valid in North America.
2. Limited warranty is valid only if you purchase our products from our authorized dealers (including both regular retailers and online retailers) in North America. If you choose to purchase our products from an authorized dealer, we will not provide any limited product warranty for you. To protect your limited product warranty, please purchase our products from one of our authorized dealers in North America near you.
3. Limited warranty is automatically void if the yellow label stating "No Warranty After Opening" is removed from the product.

TO REGISTER YOUR WARRANTY

Please fill out the warranty card that came with your unit, download or submit online warranty form. However, we need the invoice for your purchase in order to process this warranty. You may also register your warranty online. Please visit our website at www.bettermusicbuilder.com.



AGENCY REGULATORY NOTICES

Federal Communications Commission Notice

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not approved may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods to maintain compliance with FCC rules and regulations.

Materials Disposal

Disposal of this material can be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities or the Electronic Industries Alliance (EIA) (<http://www.eiae.org>).

Disposal Of Waste Equipment By Users In Private Households In The European Union

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of

your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Japanese Notice

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Japanese Power Cord Notice

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Japanese Material Content Declaration

A Japanese regulatory requirement, defined by Specification JIS-C-0950, 2005, mandates that manufacturers provide Material Content Declarations for certain categories of electronic products offered for sale after July 1, 2006.

Korean Notice

B급 기기 (가정용 방송통신기기)	이 기기는 가정용(B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.
-----------------------	------------------------------------------------------------------------------

Recycling Program

The terms and availability of these programs vary by geography because of differences in regulatory requirements and local customer demand.

因为在当地的监管要求和客户的需求，这些条件和程序的情况不同。



CONTACT INFORMATION

MAILING ADDRESS



Better Music Builder
29300 Kohoutek Way #150
Union City, CA 94587
U.S.A.

TELEPHONE NUMBERS



USA Region
USA Toll Free: 1-800-318-2218
Sales & Marketing: 510-477-9955
Customer Service: 510-477-9955

FAX NUMBERS



USA Region
Sales & Marketing: 510-477-9922
Customer Service: 510-477-9922

WORLD WIDE WEB



E-mail: sales@bettermusicbuilder.com
Website: www.bettermusicbuilder.com

MAINTENANCE

With proper maintenance and regular service, it would maintain the machine quality and prolong its life. We recommend you to print the following information clearly for future reference on maintenance and warranty.

MODEL# _____ DATE PURCHASED (MM/DD/YYYY) _____

DEALER NAME _____ CITY _____ ST./PROV. _____ ZIP/P.C. _____

DEALER WEBSITE <http://www.> _____ INVOICE # _____

DEALER PHONE # _____ DEALER E-MAIL _____



Passionate about Music
www.BetterMusicBuilder.com

Thank you for purchasing this unit. To make full and effective use of this unit, please read this Owner's Manual carefully before operating it. Please retain this manual for future reference.

